

APPLICATION


The kit FOR0001 is devised to adapt the Patu 355 Log Loader on the LT-60 Log Trailer.

Installation

1. Put the log loader plate (item 8) on the log loader plate of the trailer (item 9) as shown on figure and attach with four 3/4" x 3 1/2" NC bolts, four 3/4 lockwashers and four 3/4NC nylon insert locknuts (items 1,2 et 3). Tighten bolts firmly at 297 lbs-pi / 403 N-M.
2. Finally, put the log loader on the log loader plate (item 8) and attach with four 7/8" x 4" NC bolts, four 15/16 flat washers, four 7/8 lockwashers and four 7/8NC nylon insert locknuts (items 4,5,6 et 7). Tighten bolts firmly at 440 lbs-pi / 597 N-M.

IMPORTANT NOTE:

Verify nuts and bolts each 40 hour of utilization.

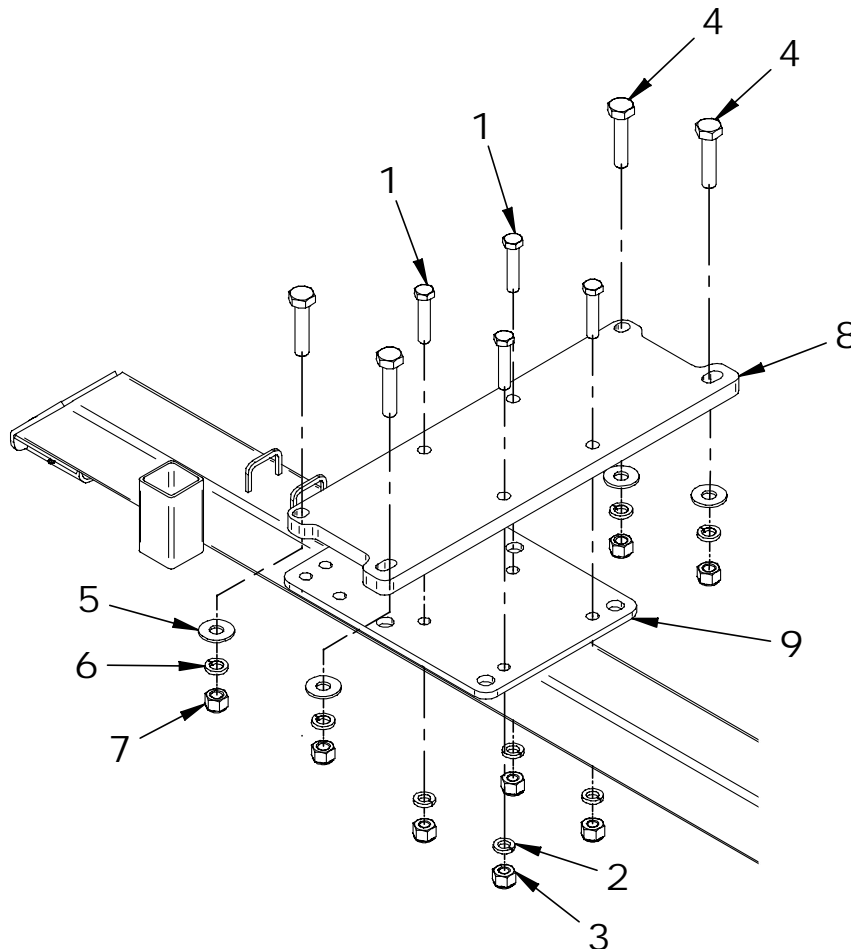

PARTS

REF.	DESCRIPTION	QTY	# PART
1	Hex. Bolt 3/4" X 3 1/2" NC, PTD. gr. 5	4	O/L
2	Lockwasher 3/4" PTD	4	O/L
3	Nylon insert locknut 3/4" NC, PTD	4	O/L
4	Hex. Bolt 7/8" X 4" NC, PTD gr. 5	4	O/L
5	Flat washer \varnothing 15/16" int, PTD	4	O/L
6	Lockwasher 7/8", PTD	4	O/L
7	Nylon insert locknut 7/8" NC, PTD	4	O/L
8	Log loader plate	1	667307

